


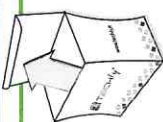

 
 






 






 









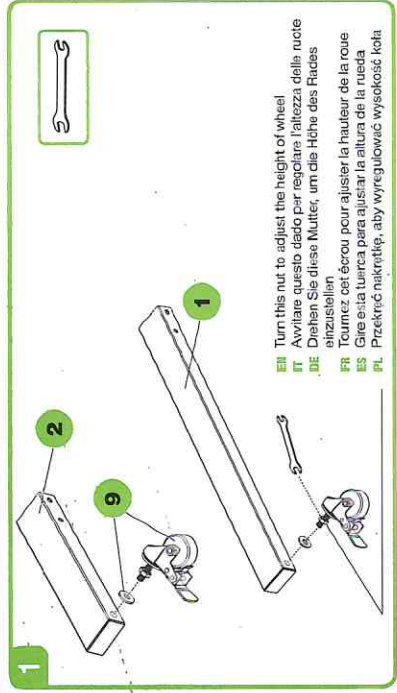
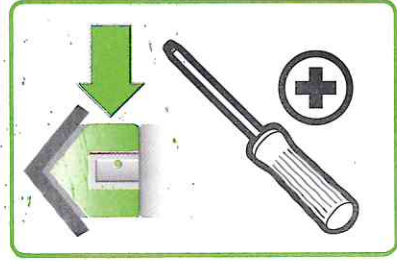
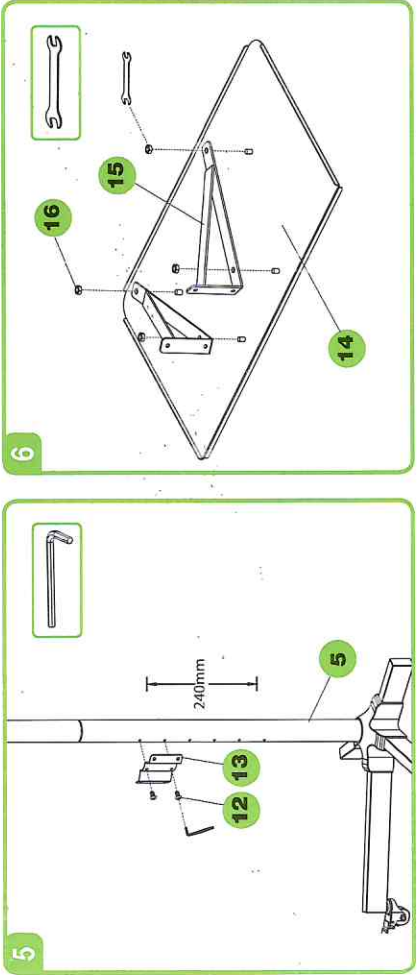
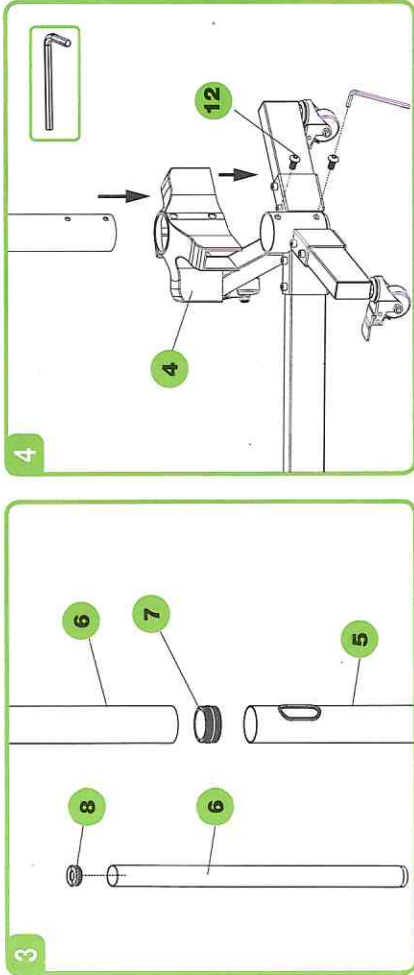
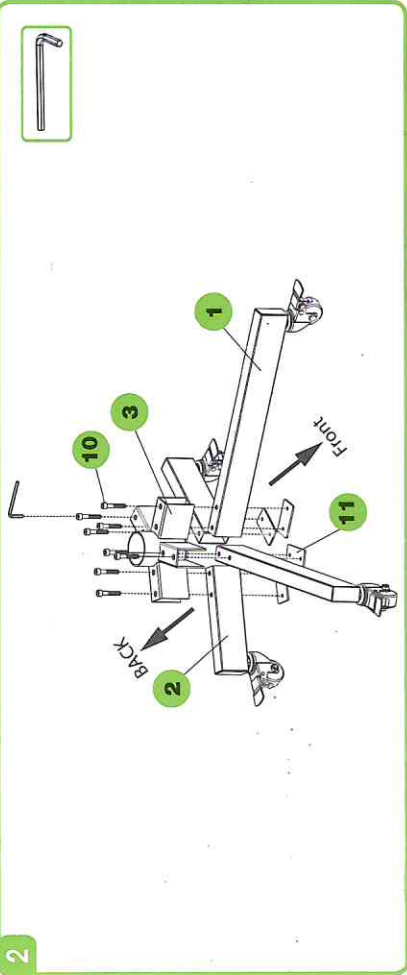
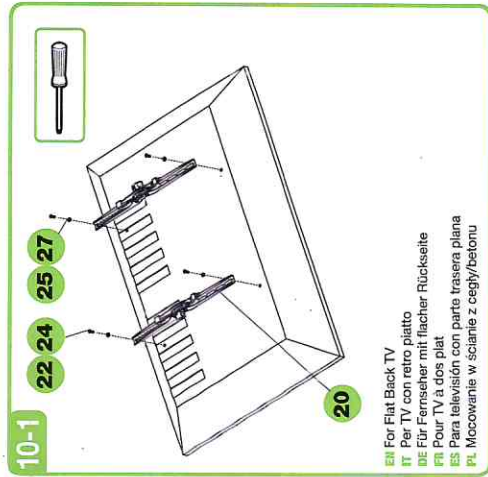
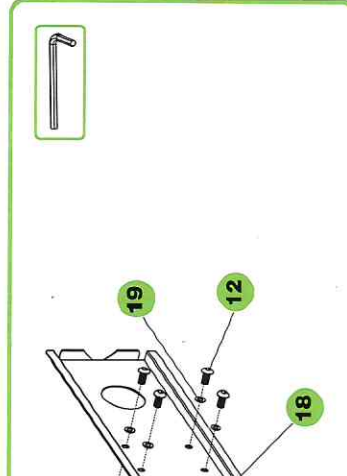
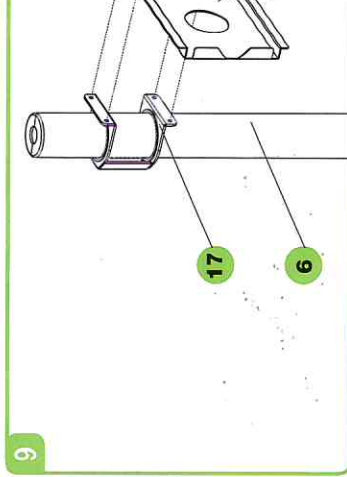
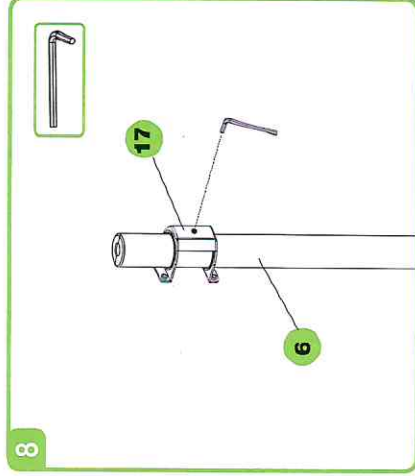
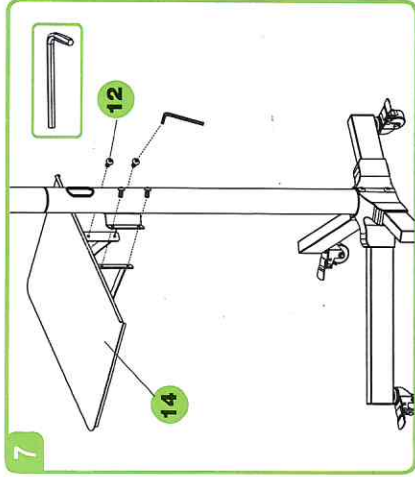


| | | | | |
|---|---|---|---|---|
|  |  |  |  |  |
|  |  |  |  |  |
|  |  |  |  |  |
|  |  |  |  |  |
|  |  |  |  |  |
|  |  |  |  |  |




EN Turn this nut to adjust the height of wheel
 IT Avvitare questo dado per regolare l'altezza della ruota
 DE Drehen Sie diese Mutter, um die Höhe des Rades einzustellen
 FR Tourner cet écrou pour ajuster la hauteur de la roue
 ES Gire esta tuerca para ajustar la altura de la rueda
 PL Przekręć nakrętkę, aby wyregulować wysokość koła





EN For Flat Back TV
 IT Per TV con retro piatto
 DE Für Fernseher mit flacher Rückseite
 FR Pour TV à dos plat
 ES Para televisión con parte trasera plana
 PL Mocowanie w ścianie z cegły/betonu

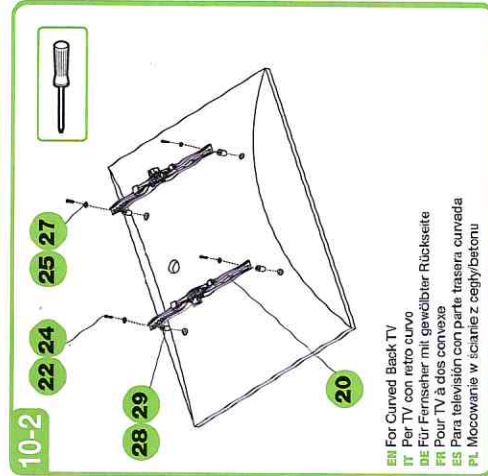

EN For Curved Back TV
 IT Per TV con retro curvo
 DE Für Fernseher mit gewölbter Rückseite
 FR Pour TV à dos convexe
 ES Para televisión con parte trasera curvada
 PL Mocowanie w ścianie z cegły/betonu

