

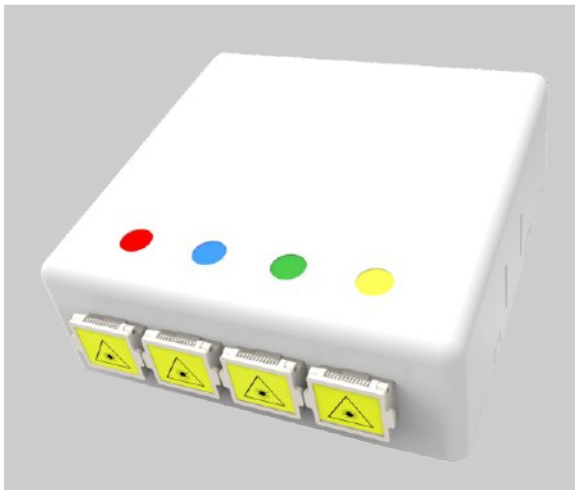
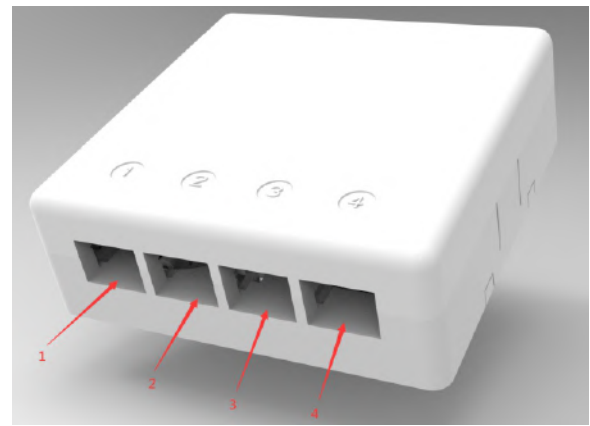
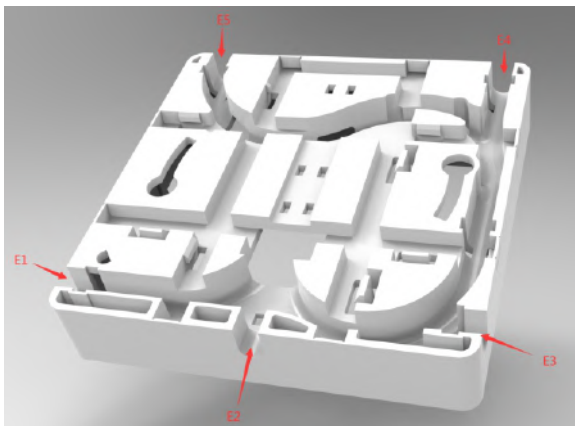
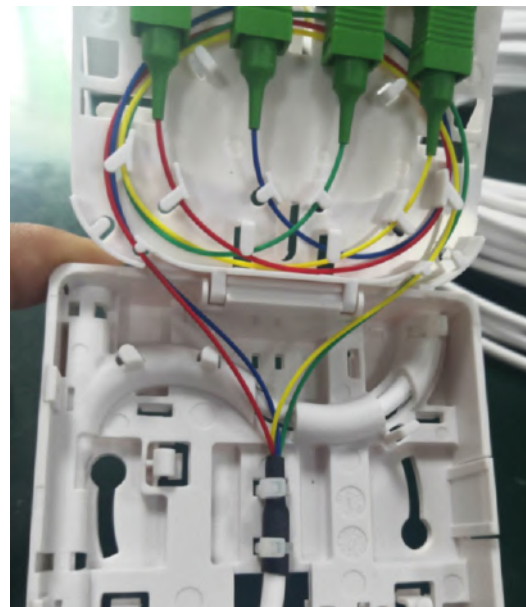



1. Open the port for cable entry and adaptor entry, please note, there are 5 cable entries and 4 adaptor entries in total, please choose the correct one according to the final application

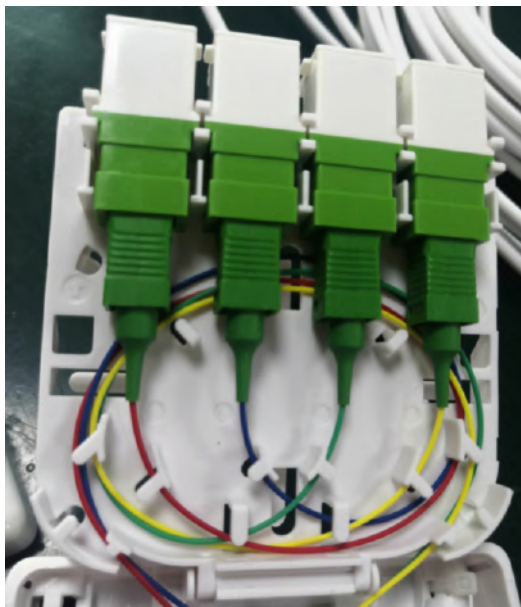

2. Install the pigtail or drop pigtail assembly as following picture, please note, we need to use cable tie to fix the drop cable when drop cable come inside. There are 2 cable entries on the splice cassette, the left one is for the installation drop cable come inside and the right one is for 900um pigtail come inside.

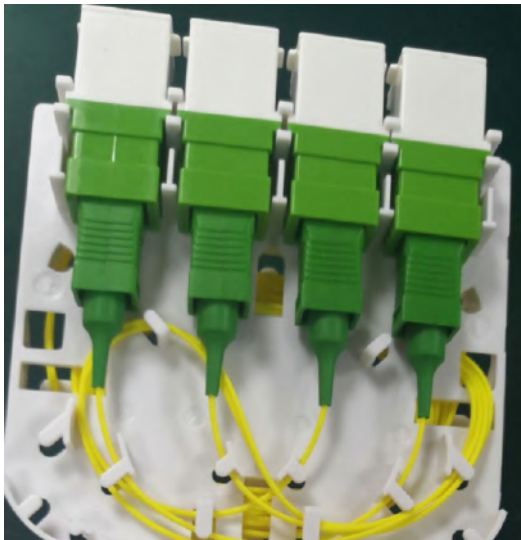

3. Open the Din rail port, please note, there are 8 Din rail ports in total, we only need to open 4 ports. Choose the correct direction you exactly need and open the Din rail port accordingly.

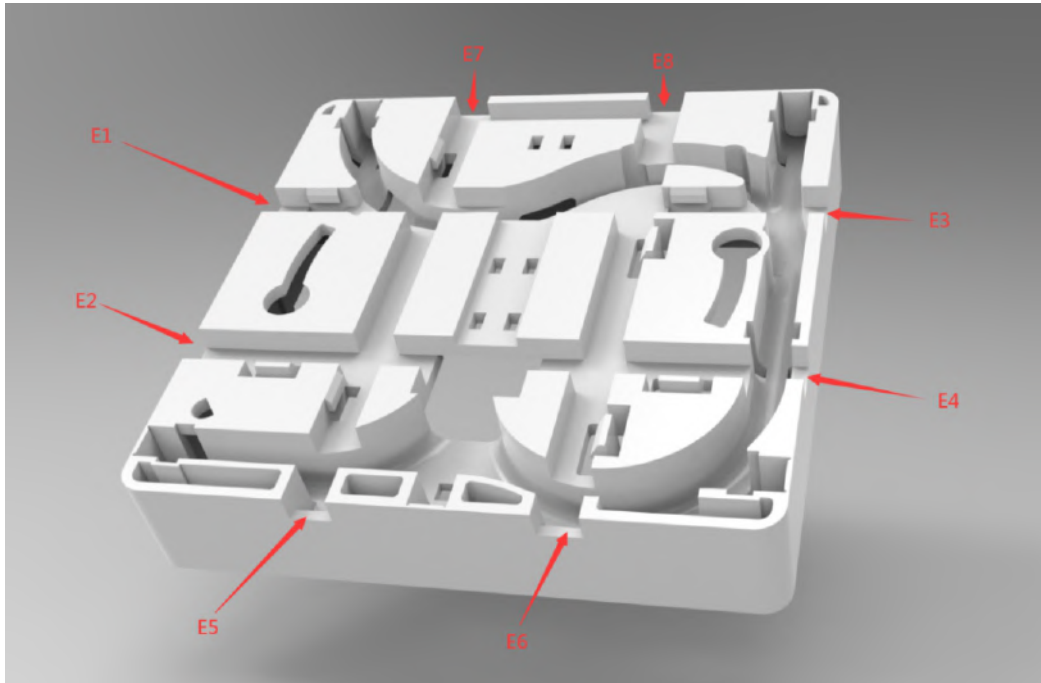

4. Press the Din Rail lock for 3~5 seconds with your fingers to make sure the Din rail lock is in good position. This process is very very important and it will make sure the box mounted on Din rail smoothly.

