

# Unshielded Cat.6 Patch Panel Installing Instruction


**1**



**180° Angle Type** (12、16、24、32、48、72、96port)

**2**

**IDC**

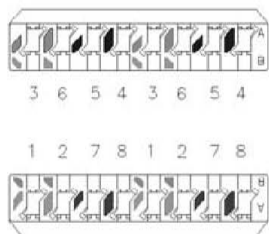


**KRONE Type**

upper row 3654 + lower row 1278 act as one port

Color Coding Information


T568A		T568B	
Pin 5	White/Blue	Pin 5	White/Blue
Pin 4	Blue	Pin 4	Blue
Pin 1	White/Green	Pin 1	White/Orange
Pin 2	Green	Pin 2	Orange
Pin 3	White/Orange	Pin 3	White/Green
Pin 6	Orange	Pin 6	Green
Pin 7	White/Brown	Pin 7	White/Brown
Pin 8	Brown	Pin 8	Brown

**3**

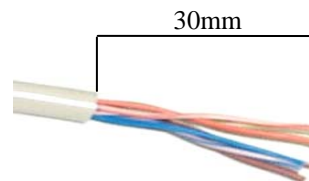

Strip approximately 30mm of the cable jacket, and separate to 4 pair each.


**4**

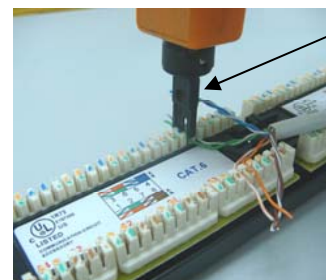

Cut outside

Follow the IDC color coding to position T568A or T568B wiring.  
Use the impact tool to crimp and connect the wires.

**5**

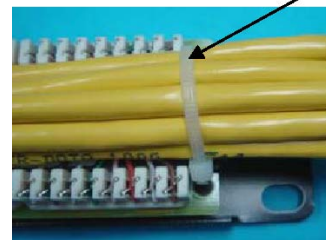

Cable tie

Use the Cable Tie to manage these cables, then complete the installation